



## AUDIO BIBLE QUICK START GUIDE

**EASY START: PRESS POWER BUTTON FOR 2 SECONDS TO TURN ON (PLAYER WILL BEEP ONCE FOR ON). TO SAVE YOUR PLACE, PRESS PAUSE FIRST THEN TURN PLAYER OFF (PLAYER WILL BEEP TWICE WHEN YOU TURN OFF).**

Always turn the unit off before charging

